

# Discover the New Features

FR Discover the New Features DE Discover the New Features  
IT Discover the New Features

EN **Download IQOS App**  
Use the IQOS app to adjust device settings and customize your experience.  
Visit [www.iqos.com/apps](http://www.iqos.com/apps)

\*Availability of the IQOS App may vary depending on the country.

FR **Download IQOS App**  
Use the IQOS app to adjust device settings and customize your experience.  
Visitez [www.iqos.com/apps](http://www.iqos.com/apps)

\*Availability of the IQOS App may vary depending on the country.

DE **Download IQOS App**  
Use the IQOS app to adjust device settings and customize your experience.  
Besuchen Sie [www.iqos.com/apps](http://www.iqos.com/apps)

\*Availability of the IQOS App may vary depending on the country.



## Pause Mode

FR Pause Mode DE Pause Mode  
IT Pause Mode

### Pause Mode Available

EN **Pause Mode Available**  
Two vertical dashes on Touch Screen indicate Pause Mode availability. Swipe DOWN across entire Touch Screen to pause experience. Pause Mode can be used once in the first or second consecutive use, and can be activated within the first 3 minutes, or 8 puffs of the experience.

FR **Pause Mode Available**  
Two vertical dashes on Touch Screen indicate Pause Mode availability. Swipe DOWN across entire Touch Screen to pause experience. Pause Mode can be used once in the first or second consecutive use, and can be activated within the first 3 minutes, or 8 puffs of the experience.

DE **Pause Mode Available**  
Zwei vertikale Striche auf dem Touch Screen deuten auf die Verfügbarkeit des Pause Modus hin. Wischen Sie DOWN über den gesamten Touch Screen, um die Erfahrung zu pausieren. Der Pause Modus kann einmal in der ersten oder zweiten aufeinanderfolgenden Verwendung aktiviert werden, und zwar innerhalb der ersten 3 Minuten oder 8 Züge der Erfahrung.



### Pause Mode Active

EN **Pause Mode Active**  
4 vertical dashes and device vibration indicate that Pause Mode has been activated. Pause Mode can last up to 8 minutes. If experience is not resumed, Holder will automatically switch off.

FR **Pause Mode Active**  
4 vertical dashes and device vibration indicate that Pause Mode has been activated. Pause Mode can last up to 8 minutes. If experience is not resumed, Holder will automatically switch off.

DE **Pause Mode Active**  
4 vertikale Striche und Geräuschvibration deuten an, dass der Pause Modus aktiviert wurde. Der Pause Modus kann bis zu 8 Minuten dauern. Wenn die Erfahrung nicht fortgesetzt wird, wird das Gerät automatisch ausgeschaltet.



### Resume Experience

EN **Resume Experience**  
Swipe UP across entire Touch Screen and wait for reheating to complete before resuming experience. Vibration and Light Guide will indicate Holder is ready to resume use.

FR **Resume Experience**  
Swipe UP across entire Touch Screen and wait for reheating to complete before resuming experience. Vibration and Light Guide will indicate Holder is ready to resume use.

DE **Resume Experience**  
Wischen Sie UP über den gesamten Touch Screen und warten Sie auf das Wiederheizen, bevor Sie die Erfahrung fortsetzen. Vibration und Licht Guide deuten an, dass das Gerät bereit ist, die Erfahrung fortzusetzen.



## FlexPuff

FR FlexPuff DE FlexPuff  
IT FlexPuff

EN **FlexPuff** automatically analyzes your experience and may provide 4 extra puffs within experience lasting up to 6 min.\*  
\*FlexPuff is designed to work with tobacco sticks. Activation and number of puffs depend on individual usage patterns, extra puffs might not apply to all adult consumers and/or experiences. FlexPuff does not activate when pause is used.

FR **FlexPuff** automatically analyzes your experience and may provide 4 extra puffs within experience lasting up to 6 min.\*  
\*FlexPuff is designed to work with tobacco sticks. Activation and number of puffs depend on individual usage patterns, extra puffs might not apply to all adult consumers and/or experiences. FlexPuff does not activate when pause is used.

DE **FlexPuff** automatisch analysiert Ihre Erfahrung und kann bis zu 4 zusätzlichen Zügen innerhalb der Erfahrung liefern, die bis zu 6 Minuten dauern.\*  
\*FlexPuff ist für den Einsatz mit Zigarettenstängeln konzipiert. Die Aktivierung und die Anzahl der Züge hängen von individuellen Nutzungsmustern ab. Zusätzliche Züge sind nicht für alle adulten Konsumenten und/oder Erfahrungen anwendbar. FlexPuff wird nicht aktiviert, wenn eine Pause verwendet wird.



## Quick Tips


FR Quick Tips DE Quick Tips  
IT Quick Tips

### Screen States

EN **Screen States**  
Two dashes, ready for two uses <sup>1</sup>.  
One dash, ready for one use <sup>2</sup>.  
(0) Battery depleted, need to recharge <sup>3</sup>.  
(E) Reset Holder and Pocket Charger <sup>4</sup>.

FR **Screen States**  
Zwei Striche, bereit für zwei Verwendungen <sup>1</sup>.  
Ein Strich, bereit für eine Verwendung <sup>2</sup>.  
(0) Batterie entladen, muss aufgeladen werden <sup>3</sup>.  
(E) Reset Holder und Pocket Charger <sup>4</sup>.

DE **Screen States**  
Zwei Striche, bereit für zwei Verwendungen <sup>1</sup>.  
Ein Strich, bereit für eine Verwendung <sup>2</sup>.  
(0) Batterie entladen, muss aufgeladen werden <sup>3</sup>.  
(E) Reset Holder und Pocket Charger <sup>4</sup>.

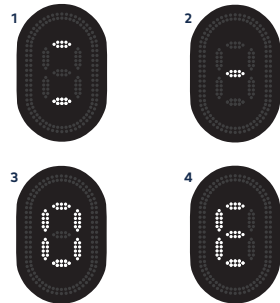

### Flex Battery Modes

EN **Flex Battery Modes**  
**Performance Mode (default)**  
Up to 3 consecutive uses without Pause or 2 consecutive uses with Pause for one of them.  
**Eco Mode\***  
Holder is set for a single use. Pause Mode is not available. \*Eco mode can only be set through IQOS App, and the availability of IQOS App may vary depending on the country.

FR **Flex Battery Modes**  
**Performance Mode (default)**  
Up to 3 consecutive uses without Pause or 2 consecutive uses with Pause for one of them.  
**Eco Mode\***  
Holder is set for a single use. Pause Mode is not available. \*Eco mode can only be set through IQOS App, and the availability of IQOS App may vary depending on the country.

DE **Flex Battery Modes**  
**Performance Mode (default)**  
Bis zu 3 aufeinanderfolgende Verwendungen ohne Pause oder 2 aufeinanderfolgende Verwendungen mit Pause für eine der Verwendungen.  
**Eco Mode\***  
Holder ist für eine einzelne Verwendung eingestellt. Der Pause Modus ist nicht verfügbar. \*Eco Modus kann nur über die IQOS App eingestellt werden, und die Verfügbarkeit der IQOS App kann je nach Land variieren.

### To Reset

EN **To Reset**  
Place Holder in Pocket Charger and press Pocket Charger Button for 10 seconds. All Status Lights will turn OFF, and turn ON to confirm a RESET. If problem persists, contact IQOS Support.

FR **To Reset**  
Place Holder in Pocket Charger and press Pocket Charger Button for 10 seconds. All Status Lights will turn OFF, and turn ON to confirm a RESET. If problem persists, contact IQOS Support.

DE **To Reset**  
Place Holder in Pocket Charger and press Pocket Charger Button for 10 seconds. Alle Status Lights werden ausgeschaltet, und werden eingeschaltet, um ein RESET zu bestätigen. Wenn das Problem persistiert, kontaktieren Sie den IQOS Support.





# How to use your IQOS ILUMA i PRIME™

FR How to use your IQOS ILUMA i PRIME™ DE How to use your IQOS ILUMA i PRIME™ IT How to use your IQOS ILUMA i PRIME™

1.

## Turn On

### EN Turn On

Press and hold Pocket Charger Button for 4 seconds, then release; Status Lights will turn ON.

### FR Turn On

Press and hold Pocket Charger Button for 4 seconds, then release; Status Lights will turn ON.

### DE Turn On

Press and hold Pocket Charger Button for 4 seconds, then release; Status Lights will turn ON.



2.

## Charge

### EN Charge

The Holder will charge automatically when placed into the Pocket Charger. Before first use, fully charge your IQOS ILUMA i PRIME™ with a compatible Power Adaptor, as per Safety Warnings and Instructions. (approx. 135 min).

### FR Charge

The Holder will charge automatically when placed into the Pocket Charger. Before first use, fully charge your IQOS ILUMA i PRIME™ with a compatible Power Adaptor, as per Safety Warnings and Instructions. (approx. 135 min).

### DE Charge

The Holder will charge automatically when placed into the Pocket Charger. Before first use, fully charge your IQOS ILUMA i PRIME™ with a compatible Power Adaptor, as per Safety Warnings and Instructions. (approx. 135 min)



3.

## Insert SMARTCORE STICK™

**EN Insert SMARTCORE STICK™**  
Insert SMARTCORE STICK™ to line on filter until Holder vibrates.

**FR Insert SMARTCORE STICK™**  
Insert SMARTCORE STICK™ to line on filter until Holder vibrates.

**DE Insert SMARTCORE STICK™**  
Insert SMARTCORE STICK™ to line on filter until Holder vibrates.



4.

## Autostart Heating

**EN Autostart Heating**  
Heating starts automatically, or, by swiping UP on Touch Screen. Touch Screen will show heating status.

**FR Autostart Heating**  
Heating starts automatically, or, by swiping UP on Touch Screen. Touch Screen will show heating status.

**DE Autostart Heating**  
Heating starts automatically, or, by swiping UP on Touch Screen. Touch Screen will show heating status.



5.

## Begin Use

**EN Begin Use**  
Start using after 2nd vibration.

**FR Begin Use**  
Start using after 2nd vibration.

**DE Begin Use**  
Start using after 2nd vibration.



6.

## Experience Countdown

**EN Experience Countdown**  
Light Guide around Touch Screen indicates remaining time of experience.

**FR Experience Countdown**  
Light Guide around Touch Screen indicates remaining time of experience.

**DE Experience Countdown**  
Light Guide around Touch Screen indicates remaining time of experience.




7.

## Nearly Complete

**EN Nearly Complete**  
To signal last 30 seconds or last 2 puffs, Holder will vibrate.

**EN Nearly Complete**  
To signal last 30 seconds or last 2 puffs, Holder will vibrate.

**EN Nearly Complete**  
To signal last 30 seconds or last 2 puffs, Holder will vibrate.

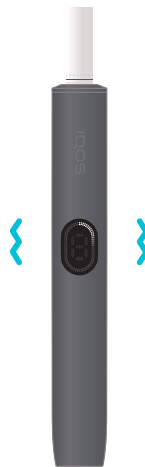

8.

## Remove SMARTCORE STICK™

**EN Remove SMARTCORE STICK™**  
Remove used SMARTCORE STICK™ and dispose as per Safety Warnings and Instructions.

**FR Remove SMARTCORE STICK™**  
Remove used SMARTCORE STICK™ and dispose as per Safety Warnings and Instructions.

**DE Remove SMARTCORE STICK™**  
Remove used SMARTCORE STICK™ and dispose as per Safety Warnings and Instructions.

