

Discover the New Features

FR Discover the New Features DE Discover the New Features
IT Discover the New Features

EN **Download IQOS App**
Use the IQOS app to adjust device settings and customize your experience.
Visit www.iqos.com/apps

*Availability of the IQOS App may vary depending on the country.

FR **Download IQOS App**
Use the IQOS app to adjust device settings and customize your experience.
Visit www.iqos.com/apps

*Availability of the IQOS App may vary depending on the country.

DE **Download IQOS App**
Use the IQOS app to adjust device settings and customize your experience.
Visit www.iqos.com/apps

*Availability of the IQOS App may vary depending on the country.



Pause Mode

FR Pause Mode DE Pause Mode
IT Pause Mode

Pause Mode Available

EN **Pause Mode Available**
Two vertical dashes on Touch Screen indicate Pause Mode availability. Swipe DOWN across entire Touch Screen to pause experience. Pause Mode can be used once in the first or second consecutive use, and can be activated within the first 3 minutes, or 8 puffs of the experience.

FR **Pause Mode Available**
Two vertical dashes on Touch Screen indicate Pause Mode availability. Swipe DOWN across entire Touch Screen to pause experience. Pause Mode can be used once in the first or second consecutive use, and can be activated within the first 3 minutes, or 8 puffs of the experience.

DE **Pause Mode Available**
Two vertical dashes on Touch Screen indicate Pause Mode availability. Swipe DOWN across entire Touch Screen to pause experience. Pause Mode can be used once in the first or second consecutive use, and can be activated within the first 3 minutes, or 8 puffs of the experience.



Pause Mode Active

EN **Pause Mode Active**
4 vertical dashes and device vibration indicate that Pause Mode has been activated. Pause Mode can last up to 8 minutes. If experience is not resumed, Holder will automatically switch off.

FR **Pause Mode Active**
4 vertical dashes and device vibration indicate that Pause Mode has been activated. Pause Mode can last up to 8 minutes. If experience is not resumed, Holder will automatically switch off.

DE **Pause Mode Active**
4 vertical dashes and device vibration indicate that Pause Mode has been activated. Pause Mode can last up to 8 minutes. If experience is not resumed, Holder will automatically switch off.



Resume Experience

EN **Resume Experience**
Swipe UP across entire Touch Screen and wait for reheating to complete before resuming experience. Vibration and Light Guide will indicate Holder is ready to resume use.

FR **Resume Experience**
Swipe UP across entire Touch Screen and wait for reheating to complete before resuming experience. Vibration and Light Guide will indicate Holder is ready to resume use.

DE **Resume Experience**
Swipe UP across entire Touch Screen and wait for reheating to complete before resuming experience. Vibration and Light Guide will indicate Holder is ready to resume use.



FlexPuff

FR FlexPuff DE FlexPuff
IT FlexPuff

EN **FlexPuff** automatically analyzes your experience and may provide 4 extra puffs within experience lasting up to 6 min.*

*FlexPuff is designed to work with tobacco sticks. Activation and number of puffs depend on individual usage patterns, extra puffs might not apply to all adult consumers and/or experiences. FlexPuff does not activate when pause is used.

FR **FlexPuff** automatically analyzes your experience and may provide 4 extra puffs within experience lasting up to 6 min.*

*FlexPuff is designed to work with tobacco sticks. Activation and number of puffs depend on individual usage patterns, extra puffs might not apply to all adult consumers and/or experiences. FlexPuff does not activate when pause is used.

DE **FlexPuff** automatically analyzes your experience and may provide 4 extra puffs within experience lasting up to 6 min.*

*FlexPuff is designed to work with tobacco sticks. Activation and number of puffs depend on individual usage patterns, extra puffs might not apply to all adult consumers and/or experiences. FlexPuff does not activate when pause is used.



Quick Tips

 
FR Quick Tips DE Quick Tips
IT Quick Tips

Screen States

EN **Screen States**
Two dashes, ready for two uses ¹.
One dash, ready for one use ².
(0) Battery depleted, need to recharge ³.
(E) Reset Holder and Pocket Charger ⁴.

FR **Screen States**
Two dashes, ready for two uses ¹.
One dash, ready for one use ².
(0) Battery depleted, need to recharge ³.
(E) Reset Holder and Pocket Charger ⁴.

DE **Screen States**
Two dashes, ready for two uses ¹.
One dash, ready for one use ².
(0) Battery depleted, need to recharge ³.
(E) Reset Holder and Pocket Charger ⁴.

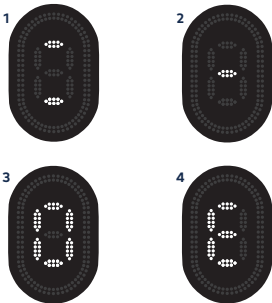

Flex Battery Modes

EN **Flex Battery Modes**
Performance Mode (default)
Up to 3 consecutive uses without Pause or 2 consecutive uses with Pause for one of them.
Eco Mode*
Holder is set for a single use. Pause Mode is not available. *Eco mode can only be set through IQOS App, and the availability of IQOS App may vary depending on the country.

FR **Flex Battery Modes**
Performance Mode (default)
Up to 3 consecutive uses without Pause or 2 consecutive uses with Pause for one of them.
Eco Mode*
Holder is set for a single use. Pause Mode is not available. *Eco mode can only be set through IQOS App, and the availability of IQOS App may vary depending on the country.

DE **Flex Battery Modes**
Performance Mode (default)
Up to 3 consecutive uses without Pause or 2 consecutive uses with Pause for one of them.
Eco Mode*
Holder is set for a single use. Pause Mode is not available. *Eco mode can only be set through IQOS App, and the availability of IQOS App may vary depending on the country.

To Reset

EN **To Reset**
Place Holder in Pocket Charger and press Pocket Charger Button for 10 seconds. All Status Lights will turn OFF, and turn ON to confirm a RESET. If problem persists, contact IQOS Support.

FR **To Reset**
Place Holder in Pocket Charger and press Pocket Charger Button for 10 seconds. All Status Lights will turn OFF, and turn ON to confirm a RESET. If problem persists, contact IQOS Support.

DE **To Reset**
Place Holder in Pocket Charger and press Pocket Charger Button for 10 seconds. All Status Lights will turn OFF, and turn ON to confirm a RESET. If problem persists, contact IQOS Support.





How to use your IQOS ILUMA i™

FR How to use your IQOS ILUMA i™ DE How to use your IQOS ILUMA i™ IT How to use your IQOS ILUMA i™

1.

Turn On

EN Turn On

Press and hold Pocket Charger Button for 4 seconds, then release; Status Lights will turn ON.

FR Turn On

Press and hold Pocket Charger Button for 4 seconds, then release; Status Lights will turn ON.

DE Turn On

Press and hold Pocket Charger Button for 4 seconds, then release; Status Lights will turn ON.



2.

Charge

EN Charge

 
The Holder will charge automatically when placed into the Pocket Charger. Before first use, fully charge your IQOS ILUMA i™ with a compatible Power Adaptor, as per Safety Warnings and Instructions. (approx. 135 min).

FR Charge

The Holder will charge automatically when placed into the Pocket Charger. Before first use, fully charge your IQOS ILUMA i™ with a compatible Power Adaptor, as per Safety Warnings and Instructions. (approx. 135 min).

DE Charge

The Holder will charge automatically when placed into the Pocket Charger. Before first use, fully charge your IQOS ILUMA i™ with a compatible Power Adaptor, as per Safety Warnings and Instructions. (approx. 135 min)

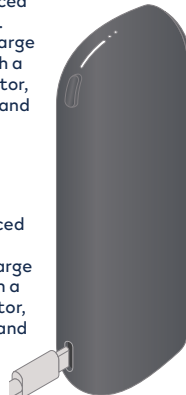

3.

Insert SMARTCORE STICK™

EN Insert SMARTCORE STICK™
Insert SMARTCORE STICK™ to line on filter until Holder vibrates.

FR Insert SMARTCORE STICK™
Insert SMARTCORE STICK™ to line on filter until Holder vibrates.

DE Insert SMARTCORE STICK™
Insert SMARTCORE STICK™ to line on filter until Holder vibrates.



4.

Autostart Heating

EN Autostart Heating
Heating starts automatically, or, by swiping UP on Touch Screen. Touch Screen will show heating status.

FR Autostart Heating
Heating starts automatically, or, by swiping UP on Touch Screen. Touch Screen will show heating status.

DE Autostart Heating
Heating starts automatically, or, by swiping UP on Touch Screen. Touch Screen will show heating status.



 
5.

Begin Use

EN Begin Use
Start using after 2nd vibration.

FR Begin Use
Start using after 2nd vibration.

DE Begin Use
Start using after 2nd vibration.

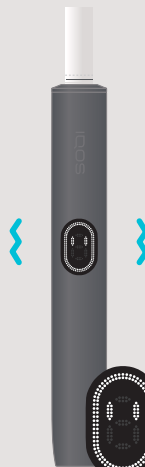

6.

Experience Countdown

EN Experience Countdown
Light Guide around Touch Screen indicates remaining time of experience.

FR Experience Countdown
Light Guide around Touch Screen indicates remaining time of experience.

DE Experience Countdown
Light Guide around Touch Screen indicates remaining time of experience.




7.

Nearly Complete

EN Nearly Complete
To signal last 30 seconds or last 2 puffs, Holder will vibrate.

EN Nearly Complete
To signal last 30 seconds or last 2 puffs, Holder will vibrate.

EN Nearly Complete
To signal last 30 seconds or last 2 puffs, Holder will vibrate.

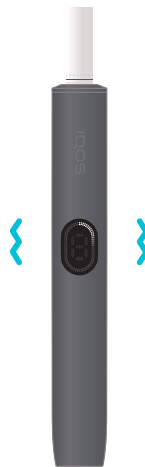

8.

Remove SMARTCORE STICK™

EN Remove SMARTCORE STICK™
Remove used SMARTCORE STICK™ and dispose as per Safety Warnings and Instructions.

FR Remove SMARTCORE STICK™
Remove used SMARTCORE STICK™ and dispose as per Safety Warnings and Instructions.

DE Remove SMARTCORE STICK™
Remove used SMARTCORE STICK™ and dispose as per Safety Warnings and Instructions.

